
Monitoring technique

VARIMETER IMD Insulation Monitor MK 5880N, MH 5880





Function diagramm

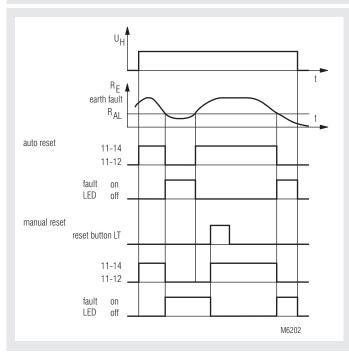

MK 5880N

- According to IEC/EN 61 557-8
- For single and 3-phase AC-systems up to 0 ... 500 V and 10 ... 1000 Hz
- · Monitors also disconnected voltage systems
- Adjustable tripping value $R_{\text{\tiny Al}}$ of 5 ... 100 k Ω
- · De-energized on trip
- Auxiliary voltage, measuring circuit and output contacts are galvanically separated
- Manual and auto reset
- · With test and reset button
- Connections for external test and reset buttons possible
- · LED indicators for operation and alarm
- · 2 changeover contacts
- MK 5880N/200 with additional prewarning
- adjustable prewarning value 10 k Ω ... 5 M Ω
- 1 output relay for alarm and 1 for pre-warning
- MH 5880/500: similar to MK 5880N but with galvanic separated analogue output and 11 step LED chain for the actual insulation value
- Wire connection: also 2 x 1.5 mm² stranded ferruled, or 2 x 2.5 mm² solid DIN 46 228-1/-2/-3/-4
- As option with pluggable terminal blocks for easy exchange of devices
- with screw terminals
- or with cage clamp terminals
- MK 5880N: 22.5 mm width MH 5880: 45 mm width

Approvals and Markings



- 1) only MK 5880N;
- 2) only MK 5880N, see CCC-Data

Applications

- Monitoring of insulation resistance of ungrounded voltage systems to
- MK 5880N/200 can also be used to monitor standby devices for earth fault, e. g. motor windings of devices that have to function in the case of emergency.
- · Other resistance monitoring applications

Notes

When monitoring 3-phase IT systems it is sufficient to connect the insulation monitor only to one phase. The 3-phases have a low resistive connection (approx. 3 - 5 Ω) via the feeding transformer. So failures that occure in the non-connected phases will also be detected.


Function

The device is connected to the supply via terminals A1-A2. The unit can either be supplied from the monitored voltage system or from an separate auxiliary supply. Terminal L is connected to the monitored voltage and PE to earth. If the insulation resistance $\rm R_{\rm E}$ drops below the adjusted alarm value $\rm R_{\rm AL}$ the red LED goes on and the output relay switches off (de-energized on trip). If the unit is on auto reset (bridge between LT1-LT2) and the insulation resistance gets better ($\rm R_{\rm E}$ rises), the insulation monitor switches on again with a certain hysteresis and the red LED goes off. Without the bridge between LT1-LT2 the Insulation monitor remains in faulty state even if the insulation resistance is back to normal. The reset is done by pressing the internal or external reset button or by disconnecting the auxiliary supply. By activating the "Test" button an insulation failure can be simulated to test the function of the unit.

The variant MK 5880N.38/200 has a second setting range with a higher resistance up to 5 $\rm M\Omega$ (Potentiometer $\rm R_{\rm \! VW}$). This setting value can be used for pre-warning with relay output.

When set to manual reset the latching is active on both settings $R_{\rm AL}$ and $R_{\rm vw}$. Therefore it is possible in the case of a short insulation decrease that the fault is stored and passed via contacts 21-22-24 to a PLC while the main fault does not lead to a disconnection of the mains via the contacts 11-12-14.

Function diagramm

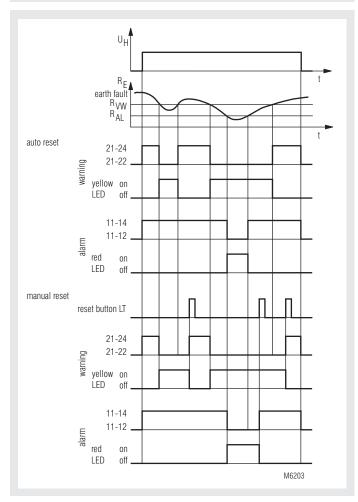

MK 5880N/200

Circuit diagram A1 11 21 L LT1 LT2 PT PE A1 A2 PE 11 12 14 A2 M8129 MH 5880N A1 11 21 L LT1 LT2 PT PE A1 A2 PE 22 24 U U I G X1 12 14 A2 MH 5880

Connection Terminals

Terminal designation	Signal designation		
A1, A2	Auxiliary voltage		
L	Connection for measuring circuit		
PE	Connection for protective conductor		
PT(/PE)	Connection for external test button		
LT1/LT2	Connection for external reset or control input for hysteresis function or manual reset LT1/LT2 bridged: Hysteresis function LT1/LT2 not bridged: Manual reset		
11, 12, 14	Alarm signal relay (1 changeover contact)		
21, 22, 24 1)	Prewarning signal relay (1 changeover contact)		
U, I, G, X1 ²⁾	Analogue output X1/G not bridged: U-G 0 10V; I-G 0 20mA X1/G bridged: U-G 2 10V; I-G 4 20mA		
¹⁾ only MK 5880N/200 and MH 5880 ²⁾ only MH 5880)		

Indicators

Notes

The insulation monitor MK 5880N is designed to monitor AC-voltage systems. Overlayed DC voltage does not damage the instrument but may change the conditions in the measuring circuit.

In one voltage system only one Insulation monitor must be connected. This has to be observed when coupling voltage system.

Line capacitance $C_{\rm E}$ to ground does not influence the insulation measurement, as the measurement is made with DC-voltage. It is possible that the reaction time in the case of insulation fault gets longer corresponding to the time constant $R_{\rm F}$ * $C_{\rm F}$.

The model MK 5880N. $^{\tilde{}}$ 38/ $^{\tilde{}}$ 200 can be used, because of it's higher setting value up to 5 M Ω , to monitor single or 3-phase loads for ground fault. If the load is operated from a grounded system the insulation resistance of the load can only be monitored when disconnected from the mains. This is normally the fact with loads which are operated seldom or only in the case of emergency but then must be function (see connection example).

The auxiliary supply can be connected to a separate auxiliary supply or to the monitored voltage system. The range of the auxiliary supply input has to be observed.

The MH5880/500 has in addition to the prewarning function also a galvanic separated analogue output and an 11 step LED chain indicator, that displays the actual insulation value between 20 kOhm and 1 MOhm. On terminals U/G of the analogue output 0-10 V are provided, on terminals I/G 0-20 mA are available. By bridging terminals X1 and G the output can be switched over to 2-10 V and 4-20 mA. For the scaling of the analogue output see diagram M10142.

25.11.14 en / 488

Setting areen LED "ON": on, when supply voltage connected settina of & DOLD ₩K5886 prewarning value yellow LED "VW"; (only with MK5880N/200) on, when insulation resistance is under prewarning value setting of alarm (only with MK5880N/200) value for earth fault red LED "AL": on, when insulation test button fault detected reset button ■■■ 0054046 ■■■ M8295 a

Technical Data

Auxiliary circuit

AC 220 ... 240 V, AC 380 ... 415 V Nominal voltage U_N:

DC 12 V, DC 24 V

Voltage range

0.8 ... 1.1 U_N AC: 0.9 ... 1.25 Ü_N DC: Frequency range (AC): 45 ... 400 Hz

Nominal consumption:

AC: approx. 2 VA DC: approx. 1 W

Measuring circuit

Nominal voltage U_N: AC 0 ... 500 V 0 ... 1.1 U_N Voltage range: 10 ... 1000 Hz Frequency range: Alarm value R_{AI}: $5 \dots 100 \; k\Omega$ Prewarning value R

(only at MK 5880N/200): $10~k\Omega ...~5~M\Omega$ Setting R_{AL}, R_{vw}: infinite variable

Internal test resistor: equivalent to earth resistance of < 5 k Ω

Internal AC resistance: $> 250 \text{ k}\Omega$ Internal DC resistance: > 250 k Ω

Measuring voltage: approx. DC 15 V, (internally generated)

Max. measuring current $(R_{E} = 0)$:

Max. permissible noise

DC voltage: Operate delay

at $R_{AI} = 50 \text{ k}\Omega$, $C_{E} = 1 \mu\text{F}$ R_F from ∞ to 0.9 \bar{R}_{AL} :

 $R_{\scriptscriptstyle \perp}$ from ∞ to 0 k Ω : Hysteresis

at $R_{AL} = 50 \text{ k}\Omega$:

Output

Contacts:

MK 5880N.12: 2 changeover contacts MK 5880N.38/200: 2 x 1 changeover contact

Thermal current I,:

Switching capacity

Technical Data

to AC 15

3 A / AC 230 V IEC/EN 60 947-5-1 NO contact: NC contact: 1 A / AC 230 V IEC/EN 60 947-5-1 to DC 13: 1 A / DC 24 V IEC/EN 60 947-5-1 **Electrical life** IEC/EN 60 947-5-1

to AC 15 at 1 A, AC 230 V: ≥ 3 x 10⁵ switching cycles

Short circuit strength

IEC/EN 60 947-5-1 max. fuse rating:

Mechanical life: ≥ 30 x 10⁶ switching cycles

Analogue output with MH 5880/500

galvanic separation AC 3750V

to auxiliary supply, measuring circuit and relay output

terminal U(+) / G(-): 0 ... 10 V, max. 10 mA 0 ... 20 mA, burden 500 Ohm terminal I (+) / G(-):

change to 2 ... 10 V or 4 ... 20 mA by bridging terminal X1 and G (see diagram M10142)

General Data

Continuous operation Operating mode: Temperature range:

Clearance and creepage

distances

rated impulse voltage / pollution degree

between auxiliary supply connections (A1- A2):

between measuring input

connections (L - PE):

between auxiliary supply and measuring input

connections:

EMC Electrostatic discharge:

Fast Transients: Surge voltages

between A1 - A2:

between L - PE:

Interference suppression:

Degree of protection

Housing:

Terminals:

Housing:

Vibration resistance:

Wire connection

Screw terminals

Climate resistance: Terminal designation:

< 0.1 mA

DC 500 V

approx. 1.3 s approx. 0.7 s

approx. 15 %

- 20 ... + 60°C

IEC 60 664-1 4 kV / 2 at AC-auxiliary voltage

IEC 60 664-1

4 kV / 2

IEC 60 664-1

4 kV / 2 (3 kV at DC-auxiliary voltage)

IEC/EN 61 000-4-2 8 kV (air) IEC/EN 61 000-4-4

2 kV IEC/EN 61 000-4-5 1 kV

(at AC-auxiliary voltage)

1 kV IEC/EN 61 000-4-5 Limit value class B EN 55 011

IP 40 IFC/FN 60 529

IP 20 IEC/EN 60 529 Thermoplastic with V0 behaviour according to UL subject 94

Amplitude 0.35 mm

frequency 10 ... 55 Hz IEC/EN 60 068-2-6 20 / 060 / 04

IEC/EN 60 068-1 EN 50 005

DIN 46 228-1/-2/-3/-4

(integrated): 1 x 4 mm² solid or

1 x 2.5 mm² stranded ferruled or 2 x 1.5 mm² stranded ferruled or

2 x 2.5 mm² solid

Insulation of wires

or sleeve length: 8 mm

Plug in with screw terminals

max. cross section

for connection: 1 x 2.5 mm² solid or

1 x 2.5 mm² stranded ferruled

Insulation of wires

or sleeve length: 8 mm

3 25.11.14 en / 488

Technical Data

Plug in with cage clamp terminals

max. cross section for connection:

1 x 4 mm² solid or

1 x 2.5 mm² stranded ferruled

min. cross section

for connection: 0.5 mm²

Insulation of wires

or sleeve length: 12 ±0.5 mm

Wire fixing: Plus-minus terminal screws M 3.5 box terminals with wire protection or

cage clamp terminals

Mounting: DIN rail IEC/EN 60 715

Weight

MK 5880N: approx. 180 g MH 5880: approx. 320 g

Dimensions

Width x heigth x depth

MK 5880N: 22.5 x 90 x 97 mm
MK 5880N PC: 22.5 x 111 x 97 mm
MK 5880N PS: 22.5 x 104 x 97 mm
MH 5880: 45 x 90 x 97 mm

CCC-Data

Auxiliary circuit

Nominal voltage U_N : AC 220 ... 240 V DC 12 V, DC 24 V

Switching capacity:

to AC 15

NO contact: 1.5 A / AC 230 V



Technical data that is not stated in the CCC-Data, can be found in the technical data section.

Standard type

MK 5880N.12 AC 220 ... 240 V

Article number: 0054044

• Auxiliary voltage U_u: AC 220 ... 240 V

adjustable

alarm value R_{AL} : 5 ... 100 k Ω • Width: 22.5 mm

Variants


MK 5880N.38/200: with pre-warning

MH 5880.38/500: similar to MK 5880N but with galvanic separated analogue output (current/voltage)

separated analogue output (current/voltage and 11 step LED chain for the actual


insulation value Width: 45 mm

Ordering example for variants

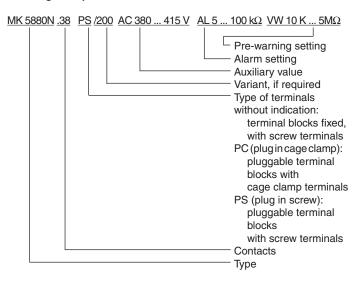

Options with Pluggable Terminal Blocks



 


Screw terminal (PS/plugin screw)

Cage clamp terminal (PC/plugin cage clamp)

Notes

Removing the terminal blocks with cage clamp terminals

- 1. The unit has to be disconnected.
- 2. Insert a screwdriver in the side recess of the front plate.
- 3. Turn the screwdriver to the right and left.
- 4. Please note that the terminal blocks have to be mounted on the belonging plug in terminations.

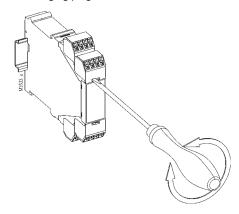


4 25.11.14 en / 488

Characteristics


MH5880

Analogue Output Voltage U_A against Insulation Resistance R_E

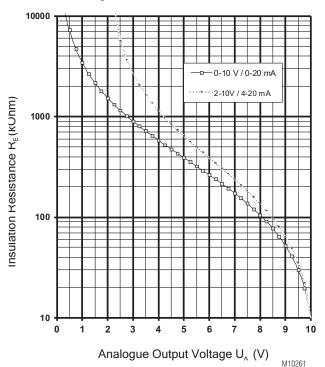


Analogue output voltage is proportional to the insulation resistance $R_{\scriptscriptstyle F}$

Connection diagrams

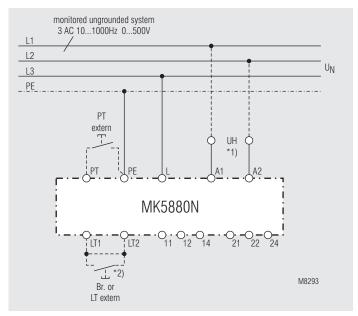

Monitoring of an ungrounded voltage system.

- *1) Auxiliary supply U_H (A1 A2) can be taken from the monitored voltage system. The range of the auxiliary supply input must be observed.
- *2) with bridge LT1 LT2: automatic reset without bridge LT1 LT2: manual reset, reset with button LT

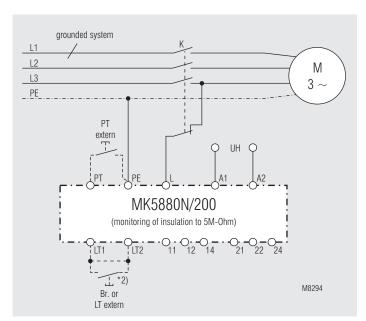

Monitoring of motorwindings againgst ground

5

The insulation of the motor to ground is monitored as long as contactor K does not activate the load.

*2) with bridge LT1 - LT2: automatic reset without bridge LT1 - LT2: manual reset, reset with button LT

25.11.14 en / 488

E. DOLD & SÖHNE KG • D-78114 Furtwang	en • PO Box 1251 • Telephone (+49) 77	723/654-0 • Telefax (+49) 77 23/654-356	