



## QL300 / QL500

### Quick Link ID-NET™ Connectors

#### DESCRIPTION

The QL series ID-NET™ connectors provide a fast and efficient way to cable an ID-NET™ network using standard cables. The QL300/500s are typically Master ID-NET™ connectors designed to be used with the QL100/150/200s ID-NET™ Slave connectors.

The QL300 is a passive connection module which can be used in Standalone or ID-NET™ Master Multidata, Slave Multidata or Master Synchronized layouts. It provides separate ports for Power Supply, External Trigger, Digital I/O and Communication. Host communication is provided through connectivity to the reader Main serial interface (RS232/485) or Aux RS232 serial interface.

ID-NET™ network and power supply signals are sent out to the next connected device by means of a dedicated port, however input power is not received from the network. Therefore each QL300 must be powered separately.

The QL500 is an active connection module which can be used in Standalone or ID-NET™ Master Multidata, or Master Synchronized layouts. It provides separate ports for Power Supply, External Trigger, Digital I/O and Communication. Host communication is provided through the integrated Ethernet module which connects internally to the reader's Main serial interface. Reader Aux RS232 serial interface is also provided.

ID-NET™ network and power supply signals are sent out to the next connected device by means of a dedicated port, however there is no network input connector and therefore it cannot be used as an ID-NET™ Slave.

Starting from software release 2.02.01 the QL500 also supports complete Backup & Restore functionality (Configuration and Environmental parameter storage) for network, Master and up to 9 Slave devices. See the QL500 software release verification note on the opposite page.

The QL series are compatible with the following readers:

DS2100N	DS4800	Matrix 410™
DS2400N		Matrix 210™




QL300




QL500

#### CONNECTIONS


ID-NET Out M12 5P Female (A-coded)	
Pin	Function
1	Shield
2	Vdc
3	GND
4	ID+
5	ID-

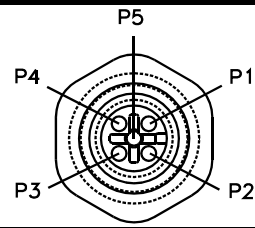


QL300 only (ID-NET In) M12 5P Male (A-coded)	
Pin	Function
1	Shield
2	nc
3	GND
4	ID+
5	ID-

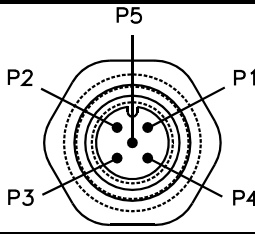

QL500 only (Ethernet) RJ45 8P Female	
Pin	Function
1	TX+
2	TX-
3	RX+
6	RX-
4, 5, 7, 8	nc

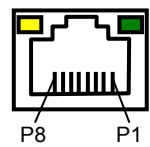


#### OVERALL DIMENSIONS

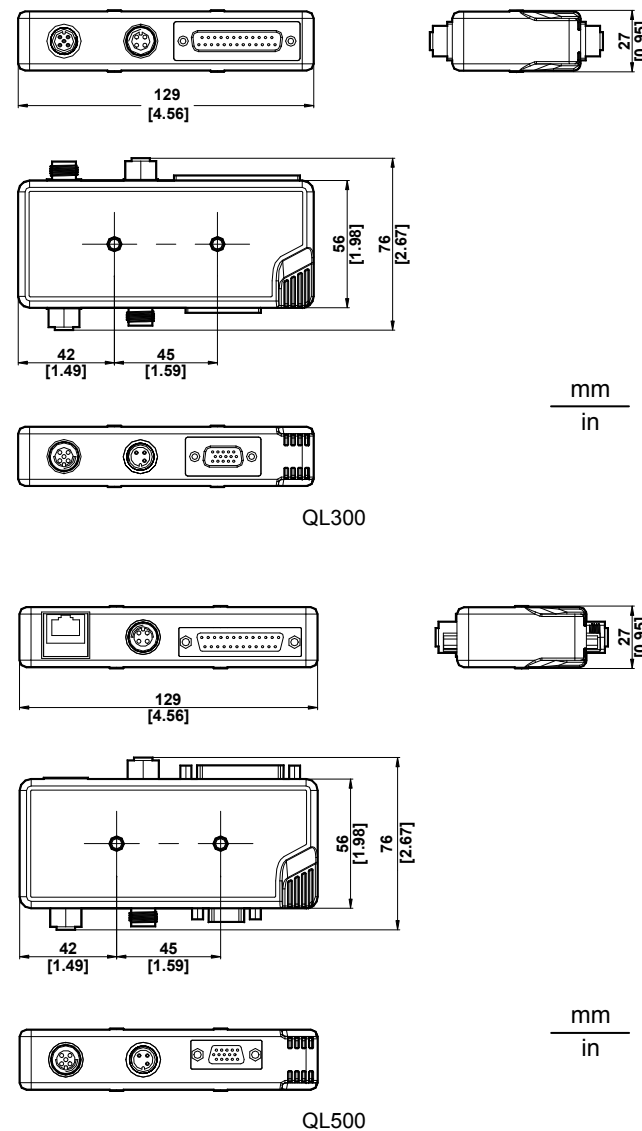


**CAUTION** Connect Input Power **only** to the 3-pin Power connector. Attempts to power the device from any other connector can result in damage to the connected devices.

Power M12 3P Male (B-coded)	
Pin	Function
1	Earth
2	Vdc
3	GND

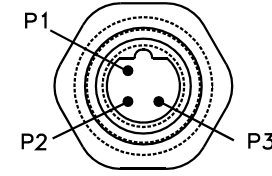

Trigger M12 4P Female (A-coded)	
Pin	Function
1	+V
2	nc
3	-V
4	I1+

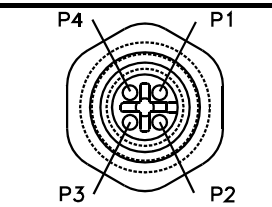

#### MOUNTING

There are two self-threading screws provided for mounting the QLs to various wooden or plastic surfaces. Mounting to other surfaces such as concrete walls or metallic panels requires user-supplied parts (screws, screw anchors, nuts, etc). Keep in mind that the connected reader must have its Chassis grounded to Earth, see paragraph "Grounding".

QLs can also be mounted to a Bosch Frame using the BA200 mounting accessory.

The distance between mounting bushings is given in the overall dimension diagram for each QL.


**NOTE** IP65 protection is provided when the cables (or QLs) are properly mated.

#### GROUNDING

There are two general rules to follow regarding network grounding:

- 1) The network Shield must only be connected to Earth ground at one point (the Master).

When using isolated power supplies, Earth grounding can be accomplished through the CAB-PW-EXT accessory cable and the BA400 or QL300/500 Power connector.

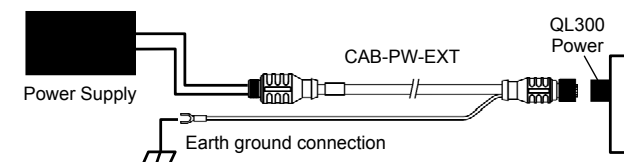

- 2) All reader Chassis must be connected to Earth ground.

All the readers in the network must have their Chassis connected to Earth ground either by: mounting to conductive metal brackets or frames which are connected to Earth ground; or through the CBX or SC4000; or through the QL bushing.

In the case of grounding through the CBX or SC4000, connect the Earth signal to a good earth ground and set the internal Chassis jumper to Earth.

In the case of grounding through the QL bushing, connect a flying lead from the mounting bushing to an Earth ground. The mounting bushing is internally connected to the reader Chassis.

Reader 25P D-Sub Female		13	1
		25	14
Pin	Function	Pin	Function
1, shell, both bushings	Reader Chassis		
2	TXM	14	nc
3	RXM	15	nc
4	RTSM *	16	nc
5	CTSM *	17	nc
6	I2A	18	I1A
7	GND	19	GND
8	O1+	20	RXA
9	nc	21	TXA
10	I2B	22	O1-
11	O2+	23	ID+
12	O2-	24	ID-
13	Vdc	25	GND

\* pins 4 and 5 are nc for QL500.

I/O Port 15P HD D-Sub Female		5	1
		10	6
Pin	Function	Pin	Function
1	O1+	9	I2A
2	TXA	10	O2-
3	RXA	11	I2B
4	RXM *	12	TXM *
5	CTSM *	13	GND
6	O1-	14	SGND
7	Vdc	15	RTSM *
8	O2+		

\* pins 4, 5, 12 and 15 are nc for QL500.

**CAUTION** Do not connect GND and SGND to different (external) ground references. GND and SGND are internally connected through filtering circuitry which can be permanently damaged if subjected to voltage drops over 0.8 Vdc.

#### ACCESSORIES

Description	Part Number	Connection
<b>Cables</b>		
CAB-PW-EXT M12 POWER EXTENSION CABLE	93A051381	Power
CBL-1480-01 M12/5P MALE/FEMALE 1M IDNET	93A050049	ID-NET Out/In
CBL-1480-02 M12/5P MALE/FEMALE 2M IDNET	93A050050	
CAB-AUX04 15P DSUB TO DB9 SERIAL CABLE 3M	93A051386	I/O Port
<b>Terminators</b>		
CBL-1490 TERM. RESIST. M12/5P/MALE IDNET	93A050046	ID-NET Out
CBL-1496 TERM. RESIST. M12/5P/FEMALE IDNET	93A050047	ID-NET In
<b>Field Mountable Connectors</b>		
FMC400 M12 3P F. CONN. POWER	93ACC1884	Power
<b>Mounting</b>		
BA200 Bosch Adaptors	93ACC1822	

The FMC accessory connectors can be used to make custom External Power and Service cables in case the standard cables don't satisfy the application requirements.

## TECHNICAL SPECIFICATIONS

ELECTRICAL FEATURES	QL300	QL500
Supply Voltage	10 to 30 Vdc (see Voltage Drop below)	
Consumption	-	210 mA - 70 mA
Maximum Distributed Current Allowed see related reading device manual for consumption	4 A	
Inputs	see relative reader Reference Manual	
Outputs	see relative reader Reference Manual	
PHYSICAL FEATURES		
Mechanical Dimensions	129 x 76 x 27 mm (5.1 x 3 x 1.1 in.)	
Weight	312 g. (11 oz.)	309 (10.9 oz.)
ENVIRONMENTAL FEATURES		
Operating Temperature	0° to 50 °C (+32° to 122 °F)	
Storage Temperature	-20° to 70 °C (-4° to 158 °F)	
Humidity max.	90% non condensing	
Vibration Resistance	14 mm @ 2 to 10 Hz	
EN 60068-2-6	1.5 mm @ 13 to 55 Hz	
2 hours on each axis	2 g @ 70 to 200 Hz	
Shock Resistance	30 g; 11 ms;	
EN 60068-2-27	3 shocks on each axis	
Protection Class	IP65 (when IP protection caps or IP cables and reading device are correctly connected)	IP40
EN 60529		

The features given are typical at a 25 °C ambient temperature (if not otherwise indicated).

## VOLTAGE DROP AND MAX DISTRIBUTED CURRENT CALCULATIONS

For correct network management, the maximum number of readers which can propagate power through the QLs must be calculated so that max distributed current is not exceeded and so voltage drop doesn't affect reader functioning. This is done according to the following formula:

$$\text{Voltage Drop} = (\text{Max Reader Current} \times \text{Number of readers}) \times (\text{Resistance per Meter per wire} \times \text{Cable length in Meters})$$

\* the resistance calculation must include both wires (Vdc and GND).

### Example:

An ID-NET™ network is composed of 4 DS2100N readers. Three 2-meter ID-NET™ cables are used to connect the readers, which have Cable Resistance = 0.058 Ohms per meter per wire. The network power is 24 Vdc.

$$(0.2083 \text{ A} \times 4 \text{ readers}) \times [(0.058 \times 2) \times 6 \text{ meters}] = 0.58 \text{ Vdc voltage drop}$$

$$24 \text{ Vdc} - 0.58 = 23.42 \text{ Vdc at reader number 4 (worst case)}$$

Integrate a sufficient number of QL200s to resupply network power.

## SOFTWARE RELEASE VERIFICATION NOTE

Starting from software release 2.02.01 the QL500 also supports:


- Ethernet IP (explicit messaging)
- Modbus TCP
- Backup & Restore

When Ethernet TCP/IP is enabled, the QL500 software release is shown in the read-only parameter in Genius™ Data Communication Settings> CBX Gateway>Line Parameters> **PrgName**. The Scanner Family must have software package 006 or later.

When Ethernet TCP/IP is enabled, the QL500 software release is shown in the VisSet™ Welcome menu. The Matrix Family reader must have software release 6.10 or later.


For more information on these features see the reader's Help On Line.

## TYPICAL LAYOUTS

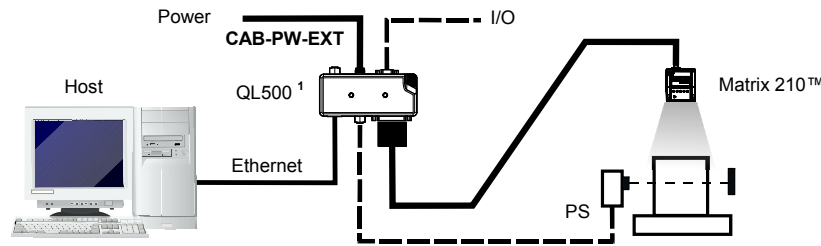

Point to Point - Matrix 210™ with QL500 (Ethernet to Host)


<sup>1</sup> The reader connected to the QL500 must be configured for Ethernet communication. See the QL500/BM2x0 Ethernet Configuration sheet provided with this device or the Setup Procedure Using Programming Barcodes available on the CD-ROM.

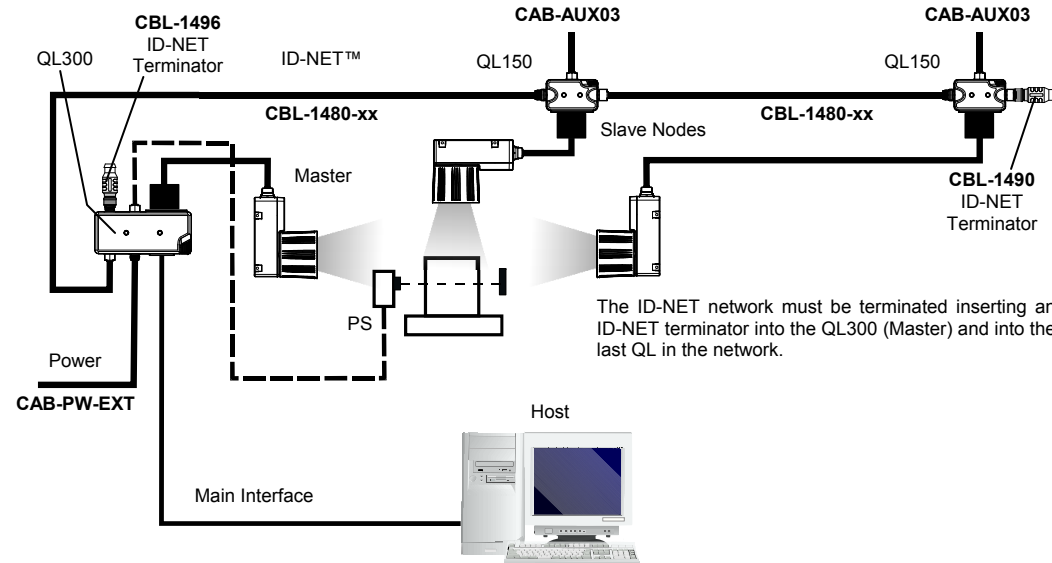


ID-NET™ Synchronized Network - Matrix 410™ Master with QL300 + Matrix 410™ Slaves with QL150

## TRIGGER

In order to allow direct trigger cabling between the photocell and the QL300/500 using standard M12 A-coded one-to-one cables, the trigger signal has been internally wired to manage PNP type photocells. The external trigger therefore **must be connected as shown in the diagram below**.

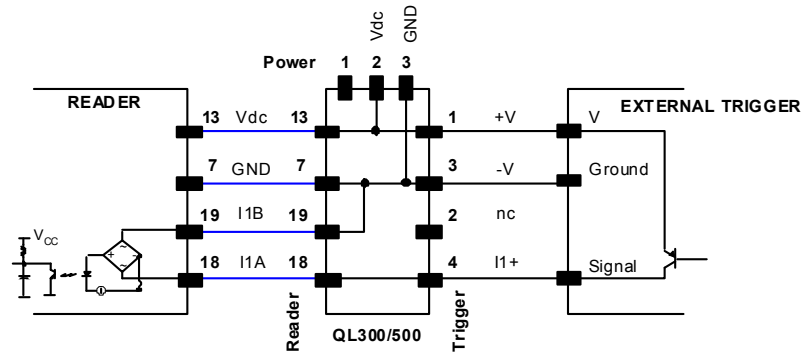


The electrical features of both inputs and outputs are given in the relative reader Reference Manual.

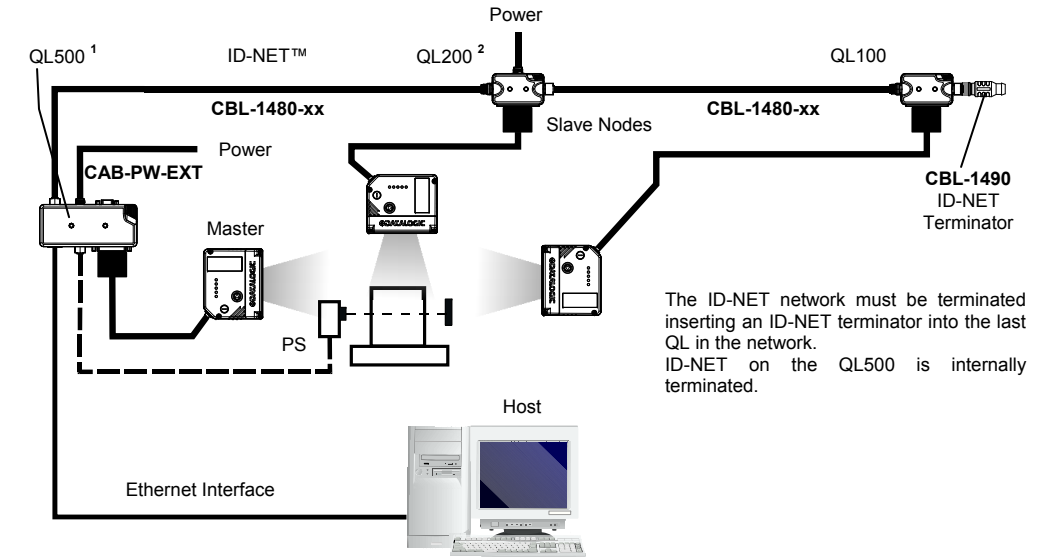

ID-NET™ Synchronized Network - DS4800 Master with QL500 + DS4800 Slaves with QL200 and QL100

<sup>1</sup> The reader connected to the QL500 must be configured for Ethernet communication. See the QL500/BM2x0 Ethernet Configuration sheet provided with this device or the Setup Procedure Using Programming Barcodes available on the CD-ROM.

<sup>2</sup> The above diagram is an example showing layout connections and is not intended to represent power limits, which instead, depend on each specific application. See "Voltage Drop and Max Distributed Current Calculations".

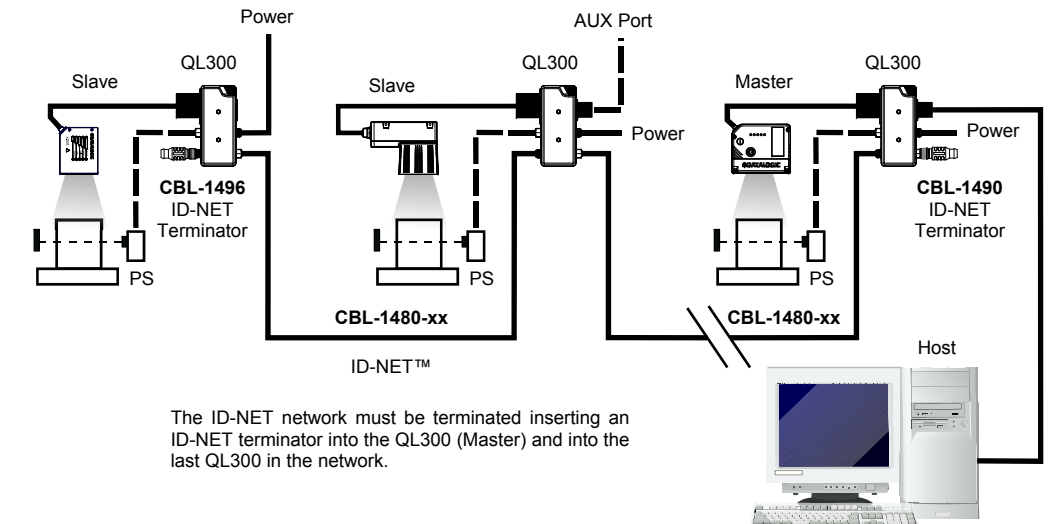

ID-NET™ Multidata Network - DS4800 Master with QL300 + Mixed Reader Slaves with QL300s

The ID-NET network must be terminated inserting an ID-NET terminator into the QL300 (Master) and into the last QL300 in the network.

## COMPLIANCE

### FCC Compliance

Modifications or changes to this equipment without the expressed written approval of Datalogic could void the authority to use the equipment.

This device complies with PART 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference which may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

### CE Compliance

#### Warning:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

### Power Supply

**This product is intended to be installed by Qualified Personnel only.**

This accessory device is intended to be supplied by a UL Listed or CSA Certified Power Unit with «Class 2» or LPS power source.