
# **SAFEMASTER Emergency Stop Module BD 5987**





## **Fucntion Diagram**

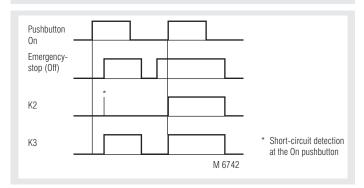

## BD 5987.

- According to
  - Performance Level (PL) e and category 4 to EN ISO 13849-1: 2008
- SIL Claimed Level (SIL CL) 3 to IEC/EN 62061
- Safety Integrity Level (SIL) 3 to IEC/EN 61508 Output: 2 NO contacts for AC 250 V
- Gold-plated contacts to switch small loads (input for PLC)
- 1-channel or 2-channel connection
- Line fault detection at On pushbutton
- LED displays for channels 1 and 2
- Overvoltage and short circuit protection
- Wire connection: also 2 x 1,5 mm<sup>2</sup> stranded ferruled (isolated), DIN 46 228-1/-2/-3/-4 or
  - 2 x 2.5 mm<sup>2</sup> stranded ferruled DIN 46 228-1/-2/-3
- Width 45 mm


- BD 5987.\_\_/001: as BD 5987.\_\_ but
   Optionally automatic On function or after activation by the On pushbutton
- Optionally cross fault detection in emergency stop circuit BD 5987.\_\_/301: as BD 5987.\_\_/001 but
- shorter release time when opening the supply circuit
- single-channel e-stop circuit

## **Approvals and Marking**



see variants

# **Block Diagram**

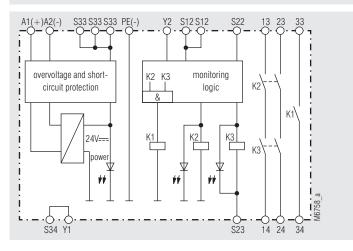

## **Applications**

Protection of people and machines

- Emergency stop circuits on machines
- Monitoring of safety gates

### Indication

LED power supply: on when operating voltage present

LED K2: on when supply on K2 LED K3: on when supply on K3


### Notes


Line fault detection at the On pushbutton:


The output contacts cannot be closed if the On pushbutton is already closed before the voltage is applied to S12, S22 (also in the event of a line fault at the On pushbutton).


A line fault at the On pushbutton which occurs after activation of the device is recognized when switching- on takes place again and closing of the output contacts is then prevented.

# **Circuit Diagrams**

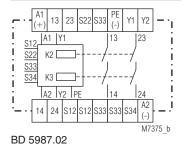

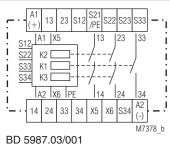

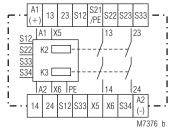

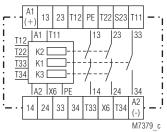

BD 5987.02/001 + /301

BD 5987.03/201

#### **Notes**

If a line fault occurs at the On pushbutton after the voltage is already present at S12, S22 undesired activation will take place, because this line fault does not differ from the normal closing function.

The gold-plated contacts of the BD 5987 mean that this module is also suitable for switching small loads of 1 mVA ... 7 VA, 1 mW ... 7 W in the range 0.1 ... 60 V, 1 ... 300 mA. The contacts also permit the maximum switching current. However, since the gold plating will be burnt off at this current level, the device is no longer suitable for switching small loads after this. The PE terminal permits operation of the device in IT systems with insulation monitoring and also serves as a reference point for testing the control voltage. The internal short-circuit protection will be bridged on DC devices, if the protective ground is connected to terminal PE.

One or more extension modules BN 5989 or external contactors with forcibly guided contacts may be used to multiply the number of contacts of the emergency stop module BD 5987.

For automatic restart:

S22 must be connected before S12. S12 initiates the automatic restart. With manual restart it is not necessary to follow this order.

#### ATTENTION - AUTOMATIC START!



According to IEC/EN 60 204-1 part 9.2.5.4.2 it is not allowed to restart automatically after emergency stop. Therefore the machine control has to disable the automatic start after emergency stop.

## **Technical Data**

#### Input

Nominal voltage U,: AC 24, 42, 48, 110, 127, 230, 240 V DC 24 V

AC 0.8 ... 1.1 U<sub>N</sub> Voltage range: DC 0.9 ... 1.2 U<sub>N</sub> at 10% residual ripple: DC 0.8 ... 1.1 U<sub>N</sub> at 48% residual ripple: Nominal consumption: approx. 5.5 VA Nominal frequency: 50 / 60 Hz Control voltage at S33: DC 24 V

Control current BD 5987.02:

typ. DC 55 mA BD 5987.02/001 + /301: typ. DC 45 mA

Minimum voltage at

terminals S12, S22: DC 21 V with activated device Recovery time: 0.5 s after release of the emergency stop pushbutton

## Output

**Contacts** 

BD 5987.02: 2 NO contacts

BD 5987.03: 2 NO contacts, 1 NO contact used for

monitoring

# ATTENTION! The NO contact 33-34 can only be used for monitoring.

Operate time:

BD 5987.02/001 + /301: with automatic restart approx. 1 s

Release time Opening in secondary

circuit (S12-S22): 50 ms  $\pm$  25 %

Opening in supply circuit

BD 5987.02: 350 ms ± 50 % BD 5987.02/001: 120 ms  $\pm$  50 % BD 5987.02/301: 40 ms  $\pm$  50 % Contact type: relay, forcibly guided

Nominal output voltage: AC 250 V

DC: see limit curve for arc-free operation Thermal current I...: see continuous current limit curve (max. 10 A in one contact path)

Switching capacity

contacts 13/14, 23/24:

5 A / AC 230 V IEC/EN 60 947-5-1 to AC 15: to DC 13: 4 A / DC 24 V IEC/EN 60 947-5-1 contacts 33/34: to AC 15: 3 A / AC 230 V IEC/EN 60 947-5-1

Electrical life:

to AC 15 at 2 A, AC 230 V: Permissible operating

frequency:

Mechanical life:

Short circuit strength max. fuse rating:

105 switching cycles IEC/EN 60 947-5-1

600 switching cycles / h

IEC/EN 60 947-5-1 6 A gL

10 x 106 switching cycles

#### **Technical Data**

#### **General Data**

Operating mode: Continuous operation

Temperature range - 15 ... + 55°C operation:

at max. 90 % humidity - 25 ... + 85 °C storage: < 2.000 m altitude:

Clearance and creepage

distances

rated impuls voltage / pollution degree: 4 kV / 2 (basis insulation) IEC 60 664-1

EMC

Electrostatic discharge: IFC/FN 61 000-4-2 8 kV (air) 10 V / m IEC/EN 61 000-4-3 HF irradiation: Fast transients: 2 kV IEC/EN 61 000-4-4

Surge voltages

between

IEC/EN 61 000-4-5 1 kV wires for power supply: IEC/EN 61 000-4-5 between wire and ground: 2 kV Interference suppression: Limit value class B EN 55 011

Degree of protection

Housina: IP 40 IEC/EN 60 529 IP 20 IFC/FN 60 529 Terminals:

Housing: Thermoplastic with V0 behaviour according to UI subject 94

Vibration resistance: Amplitude 0,35 mm IEC/EN 60 068-2-6

frequency 10 ... 55 Hz

15 / 055 / 04 IEC/EN 60 068-1 Climate resistance:

Terminal designation: EN 50 005 Wire connection: 1 x 4 mm<sup>2</sup> solid or

1 x 2,5 mm<sup>2</sup> stranded ferruled (isolated)

2 x 1,5 mm<sup>2</sup> stranded ferruled (isolated)

DIN 46 228-1/-2/-3/-4 or 2 x 2,5 mm<sup>2</sup> stranded ferruled

DIN 46 228-1/-2/-3

Wire fixing: Plus-minus terminal scews

M3.5 box terminal with wire protection DIN rail IEC/EN 60 715

Mounting: Weight: 450 g

**Dimensions** 

Width x height x depth: 45 x 74 x 121 mm

# Safety Related Data

## Values according to EN ISO 13849-1:

Category: 4 PI · е MTTF 353.1 а DC / DC avg 98.9 %

365 d/a (days/year) d<sub>op</sub>: h<sub>op</sub>: 24 h/d (hours/day)  $t_{\text{cycle}}$ . 3600 s/cycle **≙** 1 /h (hour)

# Values according to IEC/EN 62061 / IEC/EN 61508:

150/51100001
IEC/EN 62061
IEC/EN 61508
%
%
10 h <sup>-1</sup>
a (year)
1

\*) HFT = Hardware-Failure Tolerance



2

The values stated above are valid for the standard type. Safety data for other variants are available on request.

The safety relevant data of the complete system has to be determined by the manufacturer of the system.

10.03.14 en / 423

## **Standard Type**

BD 5987.02/001 DC 24 V

Article number: 0040954 stock item

Output: 2 NO contacts

 Optionally automatic On function when operating voltage is applied or after activation by the On pushbutton

Nominal voltage U<sub>N</sub>: DC 24 V
 Width: 45 mm

### **Variants**

BD 5987.02/61: with UL approval (Canada/USA)
BD 5987.02/001: Optionally cross fault monitoring on the emergency stop loop (see application M6749)

Jumper asignment for functions:

Activation via On pushbutton / or automatic On function

On pushbutton S12-S34 or S33-S34	Jumper X5 - X6	Function
	• •	The output contacts are switched only after operation of the On pushbutton. Line fault monitoring at the On pushbutton.
● M8687	•—•	Automatic On function for operating voltage Off/On or after emergency-stop release

BD 5987.03/001: with 2 NO contacts,

1 signalling contact AC/DC 0,1 ... 1 A / 10 ...120 V

BD 5987.03/201: see BD 5987.03/001,

but with special terminal designation

Jumper asignment for functions:


Activation via On pushbutton / or automatic On function

On pushbutton T11-T34 or T12-T34	Jumper T33-X6	Function
	• •	The output contacts are switched only after operation of the On pushbutton. Line fault monitoring at the On pushbutton.
● M8687	•	Automatic On function for operating voltage Off/On or after emergency-stop release


BD 5987.03/301: Starting behaviour as with BD 5987.02/001,

shorter release time when opening the supply circuit

# Ordering example for variants

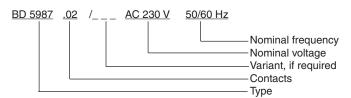


### Characteristics

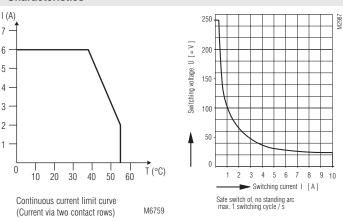


Limit curve for arc-free operation with resistive load

## **Application Examples**

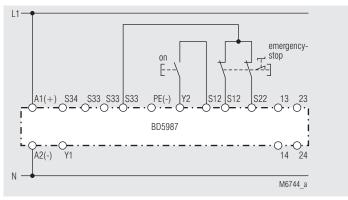

Two-channel emergeny stop circuit. Suited up to SIL3, Performance Level e, Cat. 4

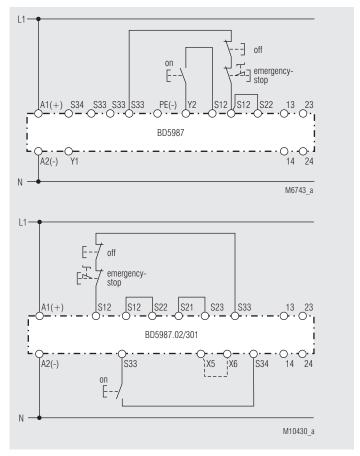


One-channel emergency stop circuit. This circuit does not have any redundancy in the emergency stop control circuit.

Suited up to SIL2, Performance Level d, Cat. 3

3 10.03.14 en / 423

## **Application Examples**

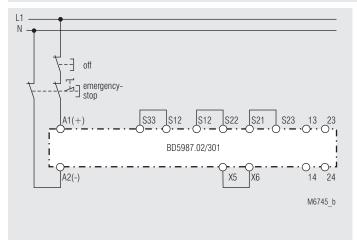


Two-pole emergency stop circuit with emergency stop control device in supply circuit with automatic ON-function.

Application for long emergency stop loops where the control voltage drops below the minimum voltage of 21 V.

## Attention:

Single faults (e.g. line faults at the emergency stop control device) are not detected with this external circuit configuration.


Suited up to SIL2, Performance Level d, Cat. 3

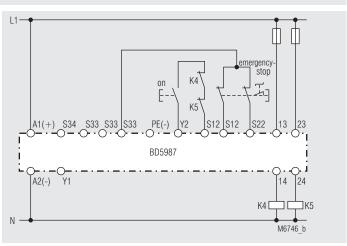


Contact reinforcement by external contactors, 2-channel.

The output contacts can be reinforced by external contactors with forcibly guided contacts for switching currents > 10 A. Functioning of the external contactors is monitored by looping the NC contacts into the closing circuit (terminals Y2 - S12).


Suited up to SIL3, Performance Level e, Cat. 4

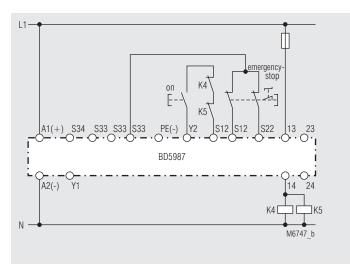


Contact reinforcement by external contactors with reduced safety level. Suited up to SIL3, Performance Level e, Cat. 4

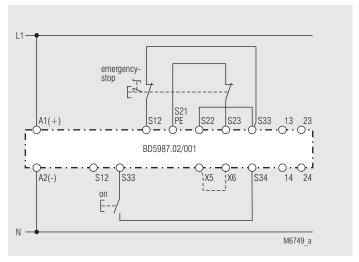

Two-channel emergency stop circuit with cross fault detection. Activation via On pushbutton. ---- Jumper X5 - X6: Jumper X5 - X6 must be fitted for the automatic On function. The On pushbutton is not required. Suited up to SIL3, Performance Level e, Cat. 4

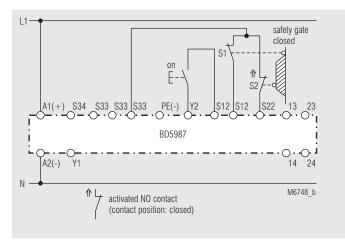

Two-channel monitoring of a safety gate. Suited up to SIL3, Performance Level e, Cat. 4

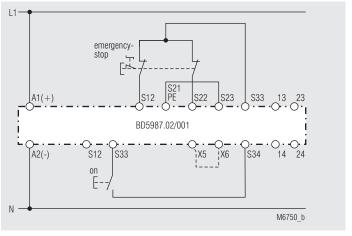

Two-channel emergency-stop circuit without cross fault detection. Activation via On pushbutton. ---- Jumper X5 - X6: Jumper X5 - X6 must be fitted for the automatic On function. The On pushbutton is not required. Suited up to SIL3, Performance Level e, Cat. 4

E. DOLD & SÖHNE KG • D-78114 Furtwangen • POBox 1251 • Telephone (+49) 77 23 / 654-0 • Telefax (+49) 77 23 / 654-356